


DOME POND HEATER

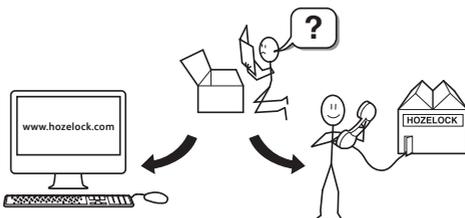

**⚠️ INSTALLATION AND OPERATING INSTRUCTIONS.
READ INSTRUCTIONS CAREFULLY BEFORE
ATTEMPTING INSTALLATION. KEEP THESE
INSTRUCTIONS FOR FUTURE REFERENCE.**

The Hozelock Cyprio Dome Pond Heater is designed for use outdoors. It must not be submerged in the pond. All electrical components are safely housed inside the product.

Important

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- WARNING: ALWAYS UNPLUG OR DISCONNECT ALL APPLIANCES IN THE POND FROM THE ELECTRICITY SUPPLY BEFORE PUTTING YOUR HANDS IN THE WATER WHILST EQUIPMENT IS BEING INSTALLED, REPAIRED, MAINTAINED OR HANDLED.**
- Do not use the supply cable to lift the Dome Pond Heater as this may cause damage.
- If the supply cable is damaged, do not operate the Dome Pond Heater.
- Check that the voltage marked on the Dome Pond Heater corresponds to the mains supply.
- A 30mA maximum Residual Current Device (RCD) MUST be fitted to the mains supply.

Installing this product in the garden is classed as 'notifiable' in the Regulations for England and Wales. The Regulations require you to tell your local authority building control department that you intend to install this product before installation. Your local authority will let you know how you can get your installation approved.

Warning: Safety and electrical connections

- The Dome Pond Heater is supplied with 5m of 3-core electric cable, which is permanently connected and sealed to the heater. The supply cable cannot be replaced. If the cable is damaged, the heater should be discarded. This product is designed to be permanently wired to the mains supply in a dry weatherproof enclosure through a Double-Pole Switched Fused Spur - (Disconnecter) - Fitted with a 3 or 5 Amp fuse. The installation must conform to the national and local wiring regulations.
- A 30mA MAXIMUM Residual Current Device (RCD) MUST be fitted to the mains supply.**
- WARNING: This appliance must be earthed and it is essential that the connections are made using the following code;**



The BROWN lead should be connected to the LIVE terminal which may be marked with an 'L' or coloured brown or red.

The BLUE lead should be connected to the NEUTRAL terminal which may be marked with an 'N' or coloured blue or black.

The GREEN/YELLOW lead should be connected to the EARTH terminal which may be marked with an 'E' or coloured green or green/yellow.

- If an extension cable is required, this should be connected to the end of the Dome Pond Heater cable using a weatherproof cable connector. The joint must be positioned in a suitable weatherproof housing. The extension cable should be of 3 core 0.75mm² Polychloroprene rubber insulated cable (ref: HOS RN-F) and permanently wired to the mains supply with a 3 or 5 Amp fuse.
- The pump cable (and extension cable) should be adequately protected against damage especially where contact with gardening equipment (lawn mowers, forks etc.) children and domestic animals may occur.
- Always disconnect the mains power supply whilst the equipment is being installed, repaired, maintained or handled. Consult a qualified electrician or local authority if in any doubt about wiring to the mains supply.

Dome pond heater installation

- The Dome Pond Heater can be positioned anywhere in the pond though to position it nearer the edge may be more convenient. The product has no ON/OFF switch on it and is turned ON/OFF from the main connection to the power supply. The Dome Pond Heater is intended to help prevent ice forming in a small area around the heater to allow gas exchange at the surface of the water; it is not intended to melt all ice off the surface of a pond.

You can begin using the heater before ice forms, but if ice has already formed, place the heater on the ice and it will melt through it.

After winter, turn off, remove the heater and store it indoors.

Before next use check the power cord and the plastic housing of the heater and do not use if damaged.

Maintenance

The Hozelock Cyprio Dome Pond Heater has no replaceable parts for maintenance purposes.

2 Year product guarantee

If this Dome Pond Heater, becomes unuseable within 2 years of the date of purchase it will be repaired or replaced at our option free of charge, unless in our opinion it has been damaged or misused.

Liability is not accepted for damage due to accident, improper installation or use. Liability is limited to replacement of a faulty Dome Pond Heater. This guarantee is not transferable. It does not affect your statutory rights.

To obtain the benefits of the guarantee, firstly contact Hozelock Cyprio Consumer Services who may request that the Dome Pond Heater is sent along with proof of purchase directly to the address below.

Contact details

Contact Hozelock Cyprio Consumer Services on 0121 313 1122 or visit www.hozelock.com

Product performance

3539

Volts (V) 230V/50Hz

Power (W) 100W



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Hozelock Ltd.
Midpoint Park, Birmingham,
B76 1AB. England
Tel: +44 (0) 121 313 1122

www.hozelock.com

33871-000